




1. Turn on the heating stripper and set the right mode and temperature.

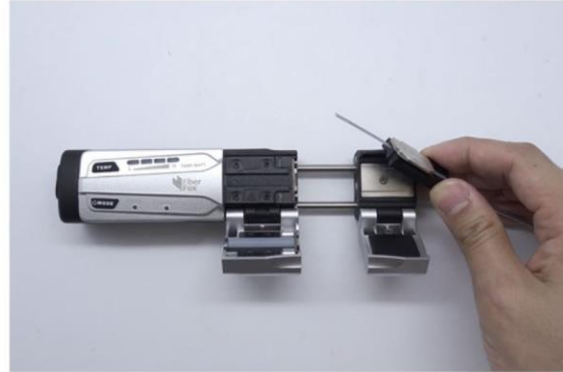

2. Open the both covers and put the holder with fiber on the right slide.



3. Close the right cover with the fiber holder.



4. Slide the fiber holder with cover closed into the thermal stripper. Check that fiber length is correct.



5. Close the left cover and wait until temperature starts blinking.



6. Squeeze both covers tight and pull the right side